




Maclaw Wheel with Wall Mount Assembly Instructions

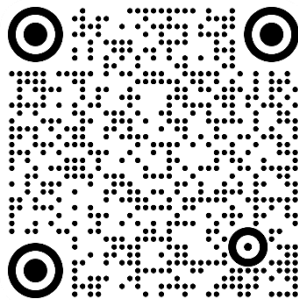

If you would like to download an electronic copy of this assembly guide (PDF format), please scan the QR code above with your mobile phone camera.

What should be in my boxes?



Box 1 - Large Box

- Cat Wheel



Box 2 - Small Box

- Cat Wheel Mount - Separated into 2 pieces (Tri-Bearing Hub Attached)
- Front Safety Cover + 1 - 30mm Attaching Bolt
- Rear Safety Cover + 3 - 12mm Attaching Screws
- Instructions / Invoice / Free getting started feather toy

Clear packets containing the following items for assembly :-

- 3** - 40mm Bolts + 3 Nuts + 3 Spring Washers + 3 Flat Washers
- 1** - Box Spanner & Toggle Bar **8** - Mounting Screws & Plugs

Additional information before assembly!

- **Two** people are required to assemble the wheel

You will require :-

- Flat Head Screwdriver
- Cross Head Screwdriver
- Hammer
- Power Drill


(note : some areas are applied with petroleum jelly to aid assembly)

Step 1 - Attach the wall mount to a wall

You will need to position and screw the wall mount in the desired location.


(Please note that we have attached screws and plugs for this purpose, but you may find these unsuitable for the type of wall you are attaching to, if you need to use something more robust, please do so.)

Ensure the centre post is resting firmly on the floor, **this should NOT be floating.**

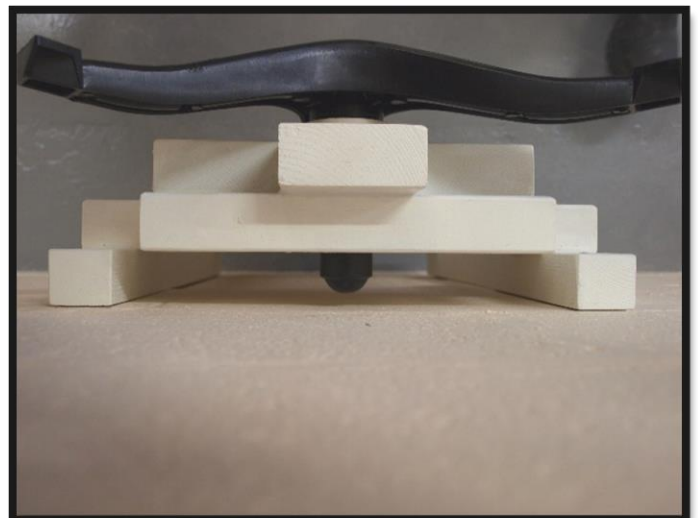

Step 2 - Attach tri-bearing to the wheel

Remove the post from the mount by forcing upwards using a pinch bar or similar tool.

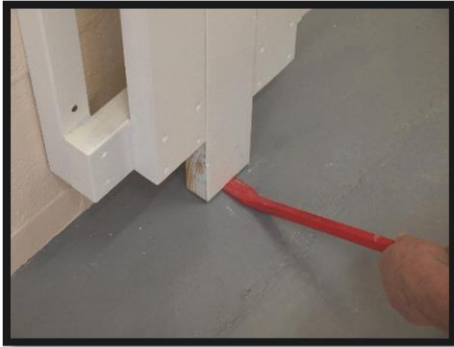

Remove the Cat Wheel from the large box and very carefully place upright on a flat surface.
- Screw the 3 - **40mm bolts** through the front until tight.




Locate and rest the tri-bearing-post onto the three bolts at the rear,
make sure you **line up the red arrows!**

(** This is important as the wheel has been balanced in this position **)



continued on page 4...

Layout the **3 Nuts + 3 Spring Washers + 3 Flat Washers** as you will need these to screw the tri-bearing onto the **40mm bolts**, pay attention to the order in which these attach.

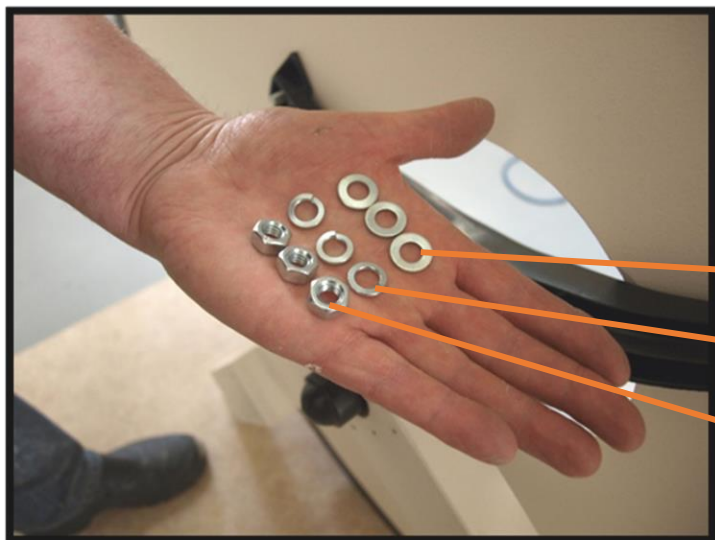

Flat Washer goes first

Spring Washer goes second

Nut attaches last

Attach as shown above and nip the nuts tight using the provided box spanner & toggle bar.

(** Do not over tighten **)




Step 3 - Mount wheel and safety covers

Screw the rear safety cover onto the post covering the tri-bearing



Lift the complete wheel with post assembly and slide the post into the mount making sure the post has locked into the 2 metal studs.

Check and make sure the post is fully locked in and there are no gaps.

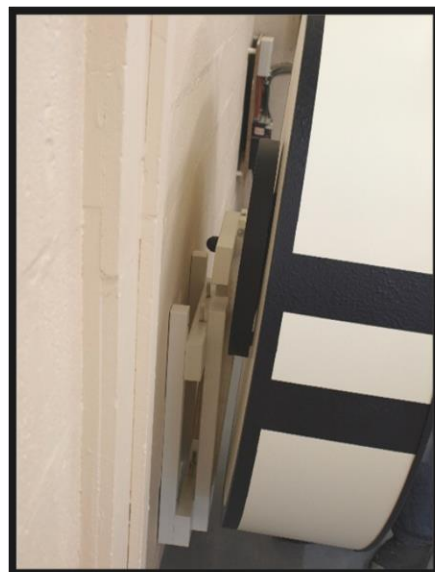

continued on page 6...



(* If you have problems locking the mount into place, you may need to give a few light taps on top of the post with a rubber hammer or similar tool. *)

Finally, attach the front safety cover...



Assembly Complete 😊

Final Notes * Please Read *

How to Remove the Wheel from the Mount

If you need to remove the wheel from the mount at any time, use a pinch bar at the bottom of the post to help lift it out of the mount whilst another person pushes up from inside the wheel.

If you require further help, please visit our website: maclawwheel.co.uk

Thank you and enjoy your Maclaw Wheel 😊

MaclawUK